chicco

6 m+

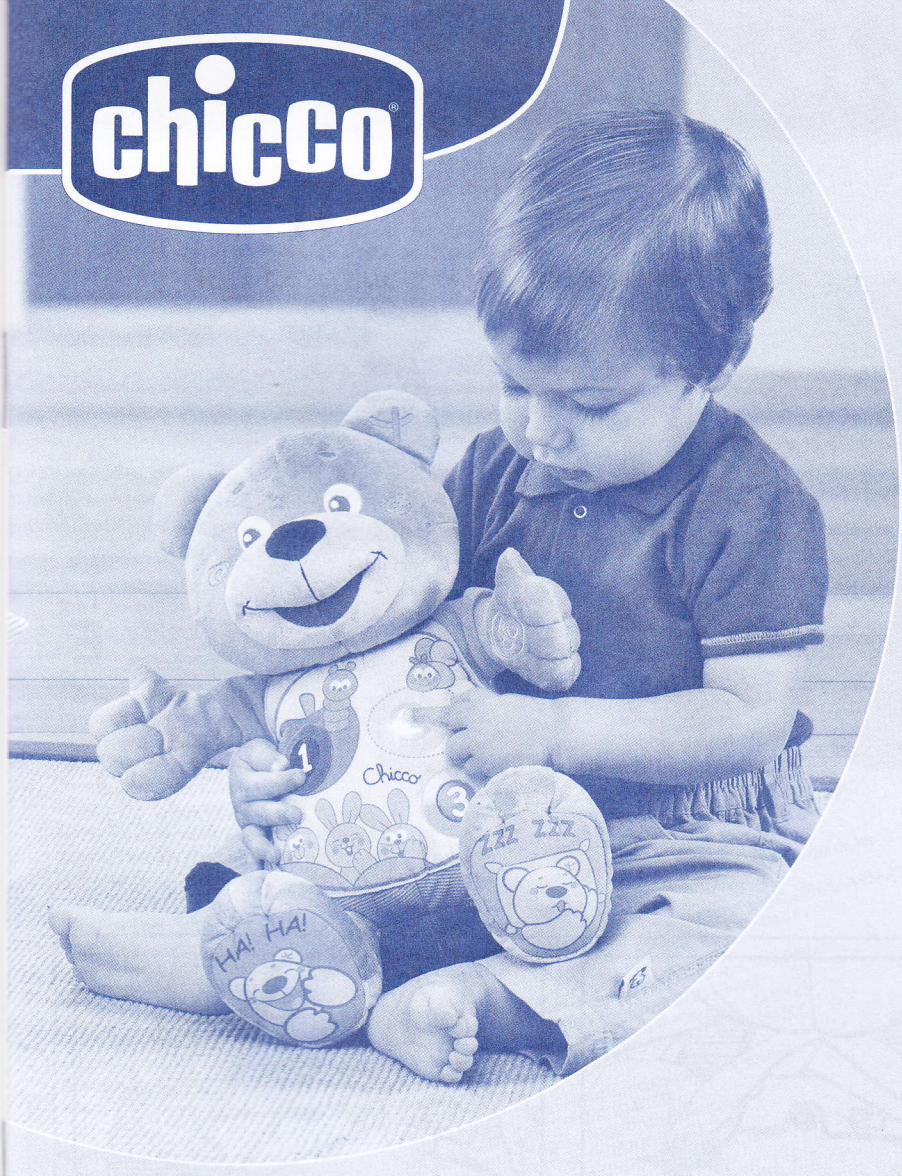

cod. 060014.000

Teddy ContaconMe

Teddy Count-with-Me

Mon Ourson Bilingue

Sprechendes Bärchen

Osito Parlanchín

Teddy Conta Comigo

Fig.1

Fig.2

Fig.3

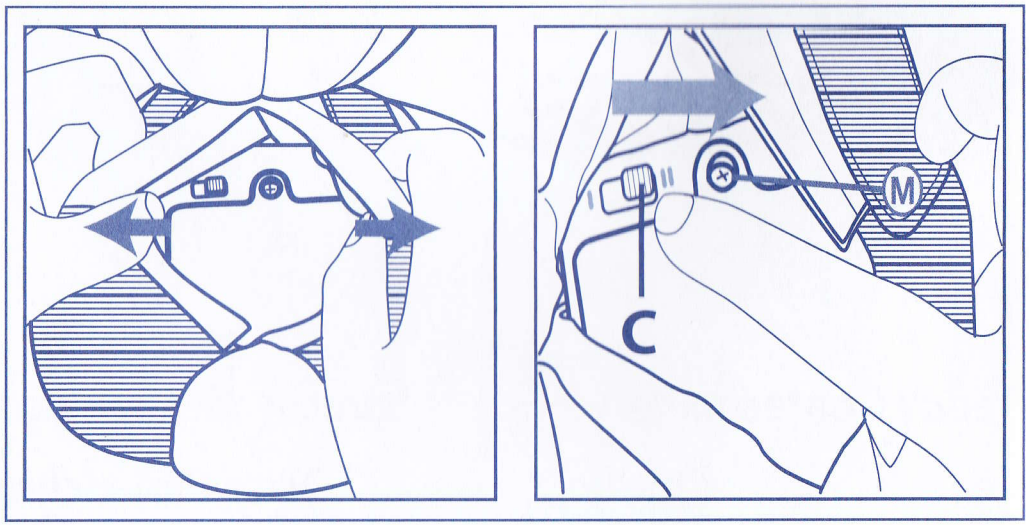

Age: From 6 Months +

- Read these instructions carefully and keep them for future reference
- The toy requires 3 type "AA", 1.5 Volt batteries (included). The batteries you find in the product at the time of its purchase, are supplied only for its demo op point of sale and must be replaced with new batteries immediately after the purchase.

WARNINGS

For your child's safety: CAUTION!

- Remove and keep out of reach of children any plastic bags and other components not belonging to the toy before use (e.g. straps, fastenings etc.).
- Regularly check the product for signs of wear and breaks. In case of damage, do not use the toy and keep it out of reach of children.
- The toy should be used under adult supervision.

INTRODUCTION

Teddy Count With Me is a tender cuddly friend that guides baby to the discovery of numbers, words and animal names.

A bilingual game: from the first months of life, babies are attracted to all sounds and show that they can distinguish among them. Teddy Count With Me a become naturally and spontaneously acquainted with the sounds of language, also a foreign one, and stimulates vocalisation through baby's listening to sung

HOW TO PLAY

How to switch on the toy and select the desired language

- Switch the toy on by keeping the ⏻ (A) button on the bear's side (fig. 1) pressed for a few seconds, a pleasant tune confirms switching on of the toy an electronic functions.
- When it is switched on, the toy is set on the mother tongue. To change language, press the buttons on the side of the bear (B). A tune is played, confirming tha has been successfully changed.
- After remaining idle for a short time, the teddy says goodbye to baby and goes on stand-by until an activity is selected by pressing a button.
- Volume regulation is effected by moving the cursor (C, fig.3) on the battery compartment from position I to position II and vice versa, according to the desirec

The battery compartment is situated inside the bear's body, and is accessible by opening the Velcro fastening on teddy's back.

- To prevent useless battery consumption, it is recommended to always switch the toy off by keeping the ⏻ (A) button pressed for a few seconds.

Speaking activities

When the lighted buttons on teddy's tummy are pressed (D, fig.2), baby is amused by its first encounter with NUMBERS, with the names of FRUITS and AN hear:

- when the button is pressed the first time: a sung rhyme;
- When the button is pressed a second time: the number and the name of the object corresponding to the pressed button (1 apple, 2 bees, 3 rabbits);
- When the button is pressed a third time: the figure represented on the button (1, 2, 3).

The lighted button remains on for the whole duration of the audio activity, to help baby focus on the selected number.

- By touching the note on the bear's paw (E) a rhyme and a short phrase are played. The three lighted buttons flash.
- When the button on the left foot of the bear is pressed (F), many amusing and dynamic activities are played together with a cheerful melody, whereas, when foot is pressed (G) the bear says goodbye to baby with a sweet tune, before going to sleep. The three lighted buttons flash.

Interactive activities

- When baby turns the bear upside down, it receives the surprise of hearing it speak and have fun.
- After a few seconds' inactivity, Teddy Count With Me calls baby and invites it to play.

Tactile /audio activities

Teddy's ears (H) contain small beads and crackling fabrics, to stimulate baby's tactile and audio skills.

BATTERY REPLACEMENT AND FITTING

- Batteries should always be replaced by an adult
- To replace the batteries: reach the battery compartment inside the teddy bear, by opening the Velcro closure on its back (fig.3). With a screw driver loosen th lid of the battery compartment (M), remove the lid, remove the spent batteries from the compartment and insert the new ones observing the correct polarity (the product), put compartment lid back on and tighten the screw.
- Never leave batteries or tools within reach of children.
- Always remove spent batteries from the product to prevent leaks that could damage the product.
- Always remove batteries if the product is not used for a long time.

- Use alkaline batteries identical or equivalent to the recommended type.
- Never mix different types of batteries or new and spent batteries.
- Do not throw spent batteries into the fire and do not leave them in the environment. Spent batteries should be disposed of in the appropriate containers.
- Do not short-circuit the power clamps.
- Do not attempt to recharge non-rechargeable batteries: explosion hazard.
- Use of rechargeable batteries is not recommended, since they could impair the toy's functionality.
- If you are using rechargeable batteries, remove batteries from the toy before recharging them and recharge them only under adult supervision.

THIS PRODUCT COMPLIES WITH EU DIRECTIVE 2002/96/EC.

The crossed bin symbol on the appliance indicates that the product, at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electric and electronic appliances or by returning it to your dealer when you buy another similar appliance. The user is responsible for taking the appliance to a special waste disposal site at the end of its life. If the disused appliance is collected correctly as separate waste, it can be recycled, treated and disposed of ecologically; this avoids a negative impact on both the environment and health, and contributes towards the recycling of the product's materials. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.

This product complies with EU Directive EU 2002/95/EC.

THIS PRODUCT COMPLIES WITH EC DIRECTIVE 2006/66/EC

The crossed bin symbol on the batteries or product pack indicates that, at the end of their life, they must not be disposed of as urban refuse. They must be disposed of separately from domestic waste, either by taking them to a separate waste disposal site for batteries or by returning them to your dealer when you buy similar rechargeable or non-rechargeable batteries.
The chemical symbols Hg, Cd, Pb, printed under the crossed bin symbol, indicate the type of substance contained in the batteries: Hg=Mercury, Cd=Cadmium, Pb=Led.
The user is responsible for taking the batteries to a special waste disposal site at the end of their life, so that they can be treated and recycled. If the spent batteries are collected correctly as separate waste, they can be recycled, treated and disposed of ecologically; this avoids a negative impact on both the environment and human health, and contributes towards the recycling of the batteries' substances. Non-compliance with the norms on battery disposal damages the environment and human health. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the batteries.

TOY CLEANING AND MAINTENANCE

This toy may only be washed superficially with a cloth moistened with water.

TEXTILE COMPOSITION

Outside: 100% Polyester
Padding: 100% Polyester

Cleaning Symbols

Do not wash in water

Do not bleach

Do not dry clean

Do not tumble dry

Do not iron

Made in China.